


OUTER REAR VIEW MIRROR GLASS

COMPONENTS

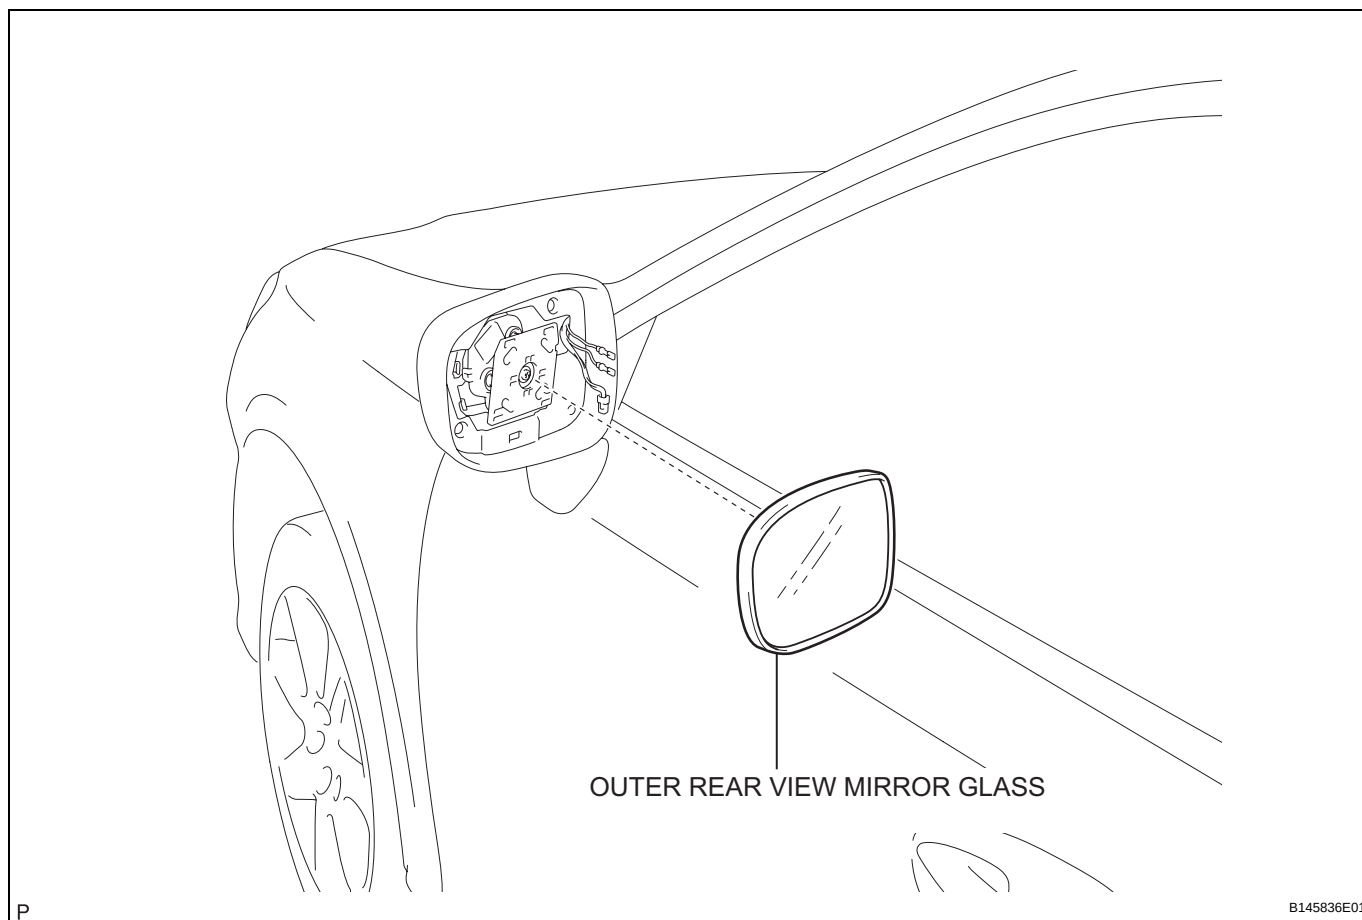


P

B145836E01

REPLACEMENT


1. REMOVE OUTER REAR VIEW MIRROR GLASS

- (a) Push the upper part of the mirror surface and tilt it.
- (b) Using a moulding remover, disengage the 2 claws at the lower part of the outer rear view mirror, and separate the outer rear view mirror glass.

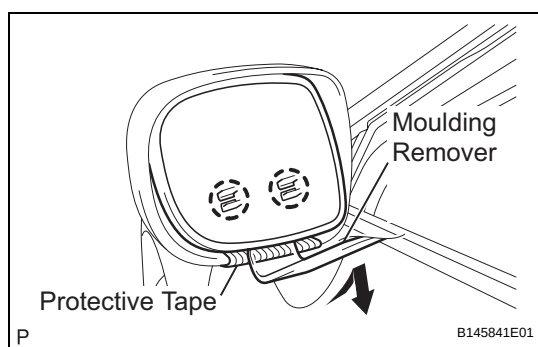

P


B145841E01

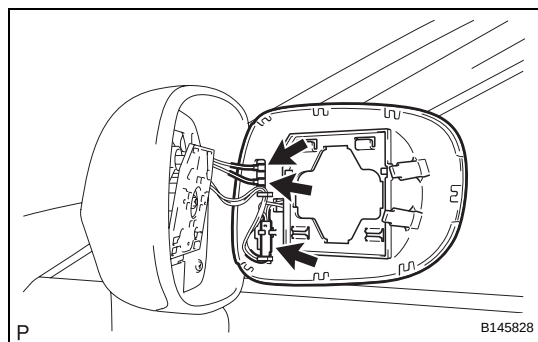


P

B145828

- (c) Disconnect each connector and remove the outer rear view mirror glass.

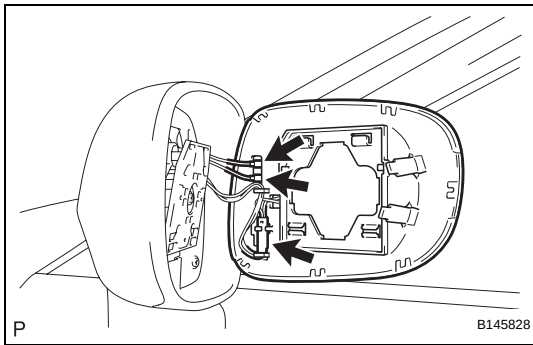**2. INSTALL OUTER REAR VIEW MIRROR GLASS**

(a) Connect each connector.

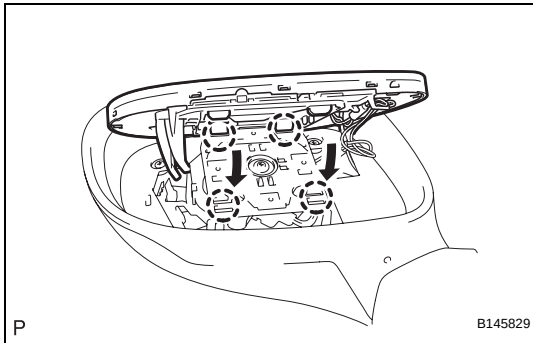

- (b) Engage the 2 claws on the upper part of the outer rear view mirror glass to the outer rear view mirror.
- (c) Engage the 2 claws on the lower part of the outer rear view mirror glass to the outer rear view mirror as shown in the illustration.